


Relay plug-in modules PM5-REL4 plus (R4+, new version) and PM5-REL4 (previous version)


for PoolManager® and Analyt

Item No. 127016

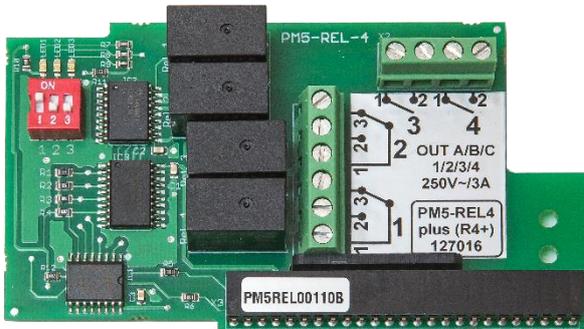


PM5-REL4 plus (R4+, new version)

Up to 3 modules per controller

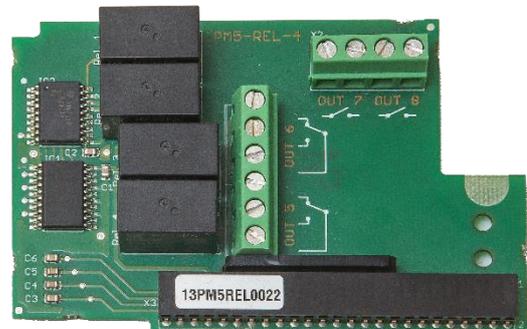


PM5-REL4 (previous version)

Only one module per controller,
can be combined with up to 2
PM5-REL4 plus modules

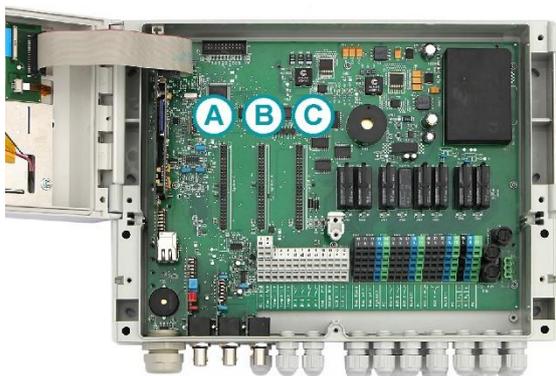

Sockets A, B and C inside the controller

If you combine a PM5-REL4 module with one or two PM5-REL4 plus (R4+) modules, the PM5-REL4 must always be plugged into socket A (on the left).

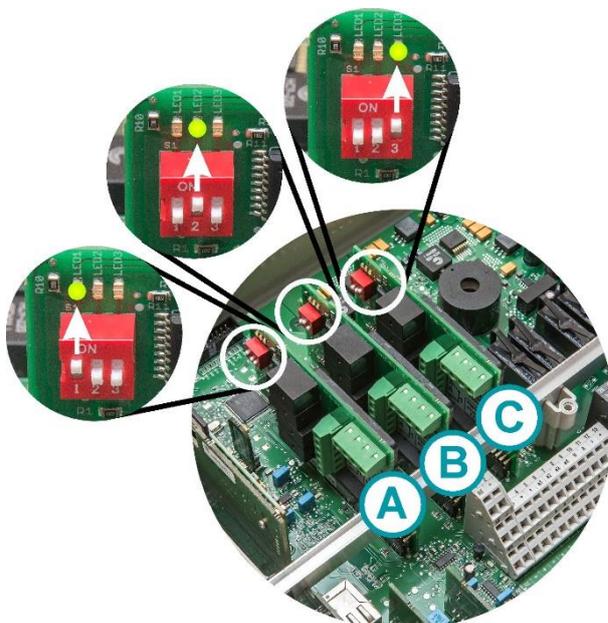

Important notice


The address of every PM5-REL4 plus (R4+) module must be set according to the socket that it is plugged in:

- Socket A (left): Push left dip switch (1) up. Outputs are named OUT A1/2/3/4 in the menu.
- Socket B (middle): Push middle dip switch (2) up. Outputs are named OUT B1/2/3/4 in the menu.
- Socket C (right): Push right dip switch (3) up. Outputs are named OUT C1/2/3/4 in the menu.

Check, if the corresponding green LEDs are illuminated as shown in the image.

You can use 1, 2 or 3 modules in any combination of sockets you like.


Combination of one PM5-REL4 module with one or two new PM5-REL4 plus (R4+) modules

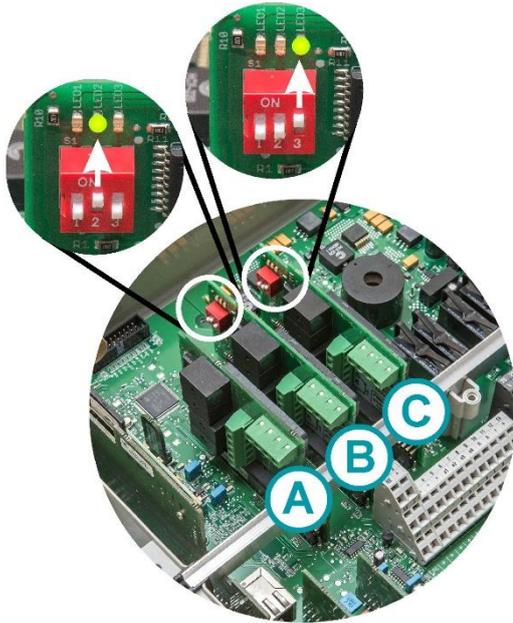

- Socket A (left): The PM5-REL4 module must be plugged-in here (the one without dip switches). Outputs are named OUT 5/6/7/8 in the menu.
- Socket B (middle): Plug in a new PM5-REL4 plus module here and push middle dip switch (2) up. Outputs are named OUT B1/2/3/4 in the menu.
- Socket C (right): Plug in a new PM5-REL4 plus module here and push right dip switch (3) up. Outputs are named OUT C1/2/3/4 in the menu.


Check, if the corresponding green LEDs are illuminated as shown in the image.

Assignment of outputs in the Menu (if 3x PM5-REL4 plus (R4+) is plugged in)

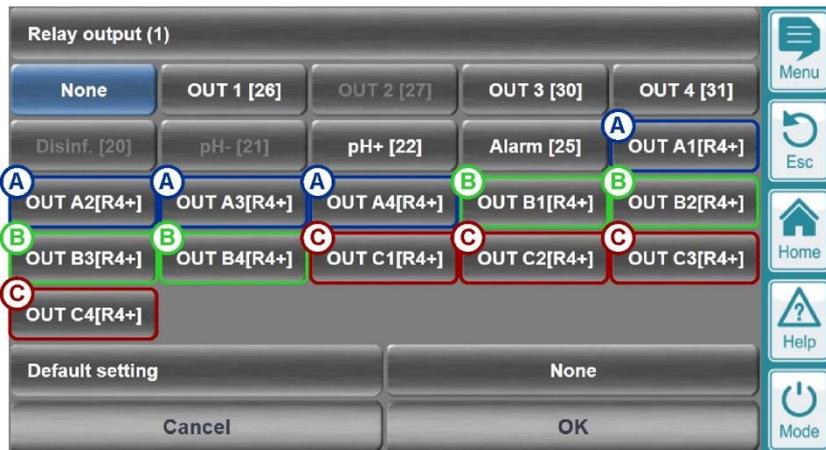

- A**
4 relay outputs of the PM5-REL4 plus (R4+) module in socket A
- B**
4 relay outputs of the PM5-REL4 plus (R4+) module in socket B
- C**
4 relay outputs of the PM5-REL4 plus (R4+) module in socket C

Assignment of outputs in the Menu (if 1x PM5-REL4 and 2x PM5-REL4 plus (R4+) is plugged in)

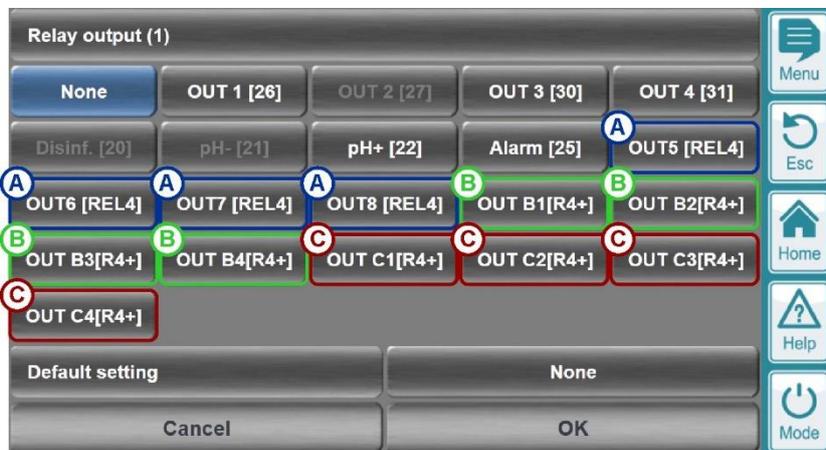

- A**
4 relay outputs of the PM5-REL4 module in socket A (named OUT5/6/7/8)
- B**
4 relay outputs of the PM5-REL4 plus (R4+) module in socket B
- C**
4 relay outputs of the PM5-REL4 plus (R4+) module in socket C